


Rudy's Retro Intelligence

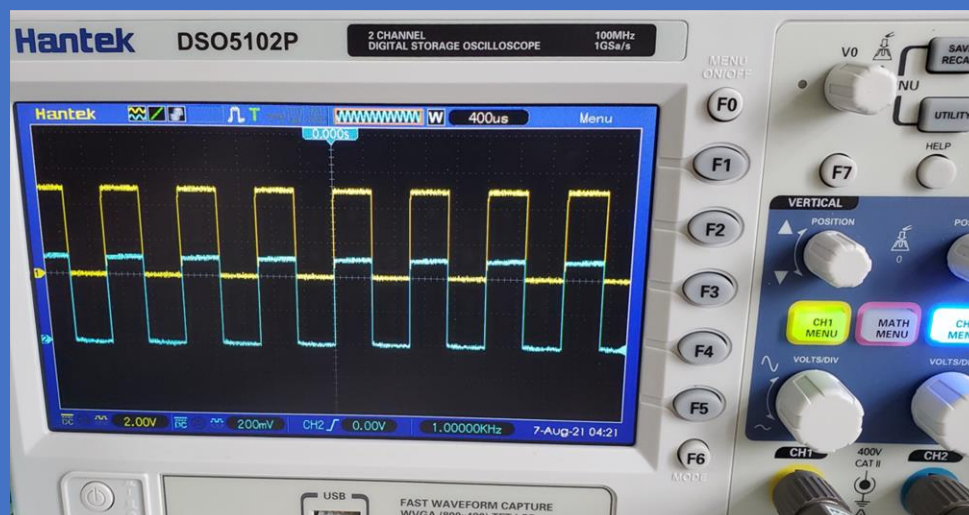

Commodore Super PET - SP9000 Diagnostics Manual

Version 2.3 Created in September 2024

Created by Rudy's Retro Intel

The purpose of this manual is to help identifying issues and the repair of a Commodore SuperPET (SP9000) computer. Excluded from this manual is the repair of the 8032 motherboard which is used in the SuperPET.

This manual will only cover the **SuperPET with the "2 Board Version"** The other version **"3 Board Version"** is not covered in this manual. A separate manual the other version will eventually be made.

The SuperPET board I used to create this manual is the:

SUPER PET COMBO BD. ASSY NO. 9000007 1482
FAB NO. 9000008 REV. B
ARTWORK NO. 9000017 REV. B

Note: The ARTWORK NO. 9000017 REV. A
is basically the same board except for the jumper wires. This manual can be used for that revision also.

For the latest version of this document and other diagnostic manuals, use the links below.

<https://github.com/RudyRetroIntel/Vintage-Computer-Diagnostics>

You can find my videos here.

<https://www.youtube.com/@RudysRetroIntel>

Contributors



Chuck Hutchins - Technical help with his many years of experience on the Commodore computers. Have a look at his collection and knowledge on his YouTube channel: <https://www.youtube.com/@HutchCA>



David Bradley - Provided several SuperPET boards for comparisons which allowed me to take measurement and fix my SuperPET board and several of his boards. See his many Commodore related videos here:

<https://www.youtube.com/@DRBradleyPhotography>

*"Sharing knowledge, we can ensure that the Commodore SuperPET computers can be repaired and enjoyed now and into the future.
Rudy's Retro Intel"*

**** This document is based on the work I have performed on my Commodore SuperPET (SP9000) computer and is provided "as is". I\we do not take any responsibility for errors and\or damages that may occur when repairing your Commodore SuperPET (SP9000) computer. This information is provided freely to all SuperPET computer owners. Please ensure you know how to perform electronics\electrical work. If not, please contact someone who has these skills before starting. ****


Index

<i>SuperPET Motherboard Modifications (8032)</i>	<i>Page 3</i>
<i>Motherboard jumper wire installation</i>	<i>Page 4</i>
<i>Character ROM modification</i>	<i>Page 5</i>
<i>The Super PET board (Single board version)</i>	<i>Page 6</i>
<i>SuperPET Parts</i>	<i>Page 7</i>
<i>Switch Setting and Usage</i>	<i>Page 8</i>
<i>Basic Operation of the SuperPET</i>	<i>Page 9</i>
<i>Jumper Wires on SuperPET board</i>	<i>Page 10</i>
<i>SuperPET Single Board REV. A Difference</i>	<i>Page 12</i>
<i>SuperPET Single Board Version Schematic</i>	<i>Page 13</i>
<i>SuperPET Symptoms and Diagnostics</i>	<i>Page 14</i>

SuperPET Motherboard Modifications (8032)

The SuperPET computer was built on a Commodore PET 8032 computer which helped to reduce cost of designing a completely new computer system.

8032 Motherboard with identifications

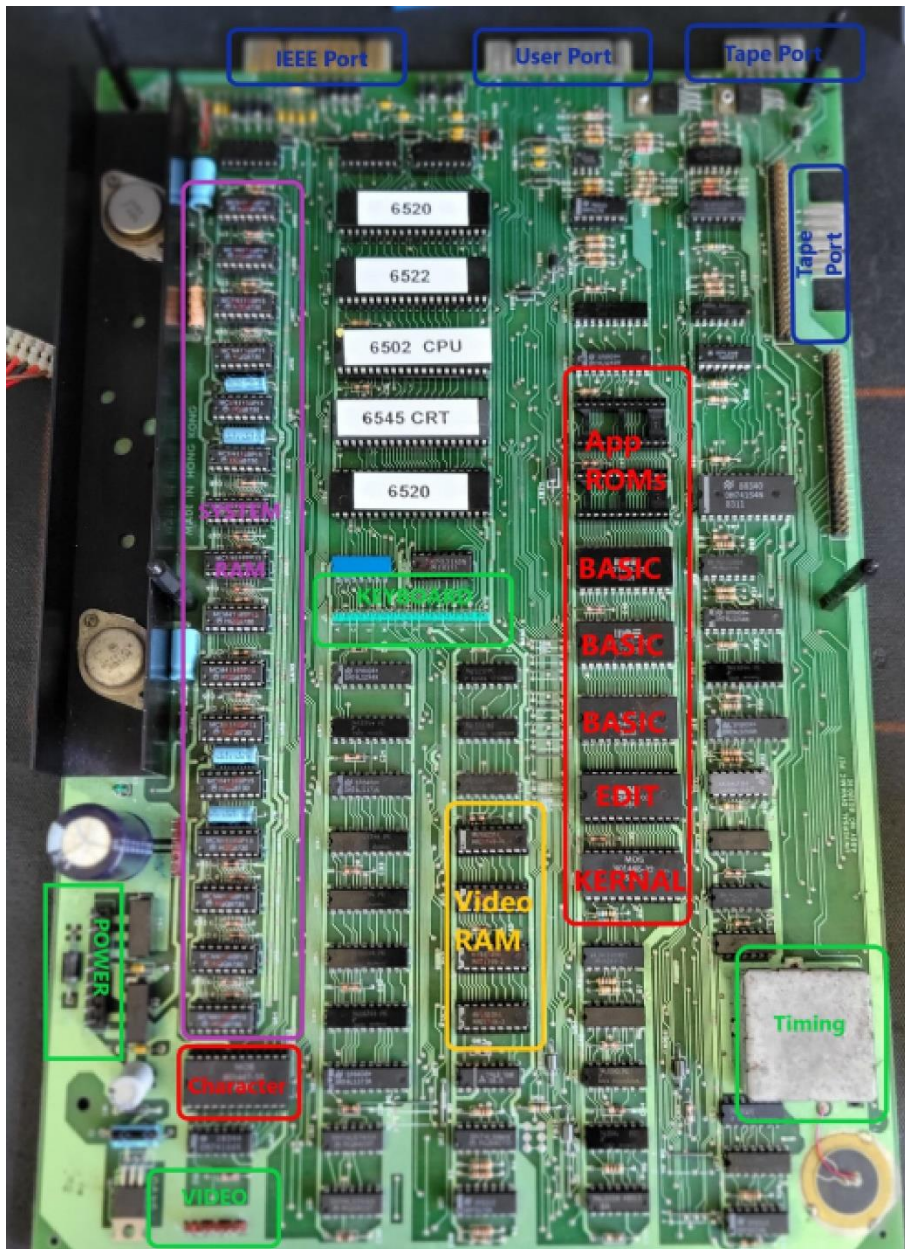

Commodore PET 8032

Original

901465-19: BASIC ROM
901465-20: BASIC ROM
901465-21: BASIC ROM
901465-22: KERNAL ROM
Character ROM: 901447-10

BASIC ROM Bug Fix

901465-23: BASIC ROM
901465-20: BASIC ROM
901465-21: BASIC ROM
901465-22: KERNAL ROM
Character ROM: 901447-10

6545 used in 12"inch screen PETs for
H-Sync and V-Sync

6522 VIA (Versatile Interface Adapter)

6520 PIA (Peripheral Interface Adapter)

Video RAM

4 x 2114 RAM ICs

Main System RAM

16 x 4116 RAM ICs

CPU: 6502 (1 Mhz)

<https://www.youtube.com/@RudysRetroIntel>




In order to get the PET 8032 (8032) to work as a SuperPET, there are 2 modifications needed so that it will work with the SuperPET daughter board.

- Motherboard jumper wire installation
- Upgrade the Character ROM

Motherboard jumper wire installation

A jumper wire is needed to pass through a clock signal from the 8032 to the daughter board

Verify\Install a wire from **UD3** pin 1 - 74LS393 connected to **U17** pin 35 – 6502 CPU

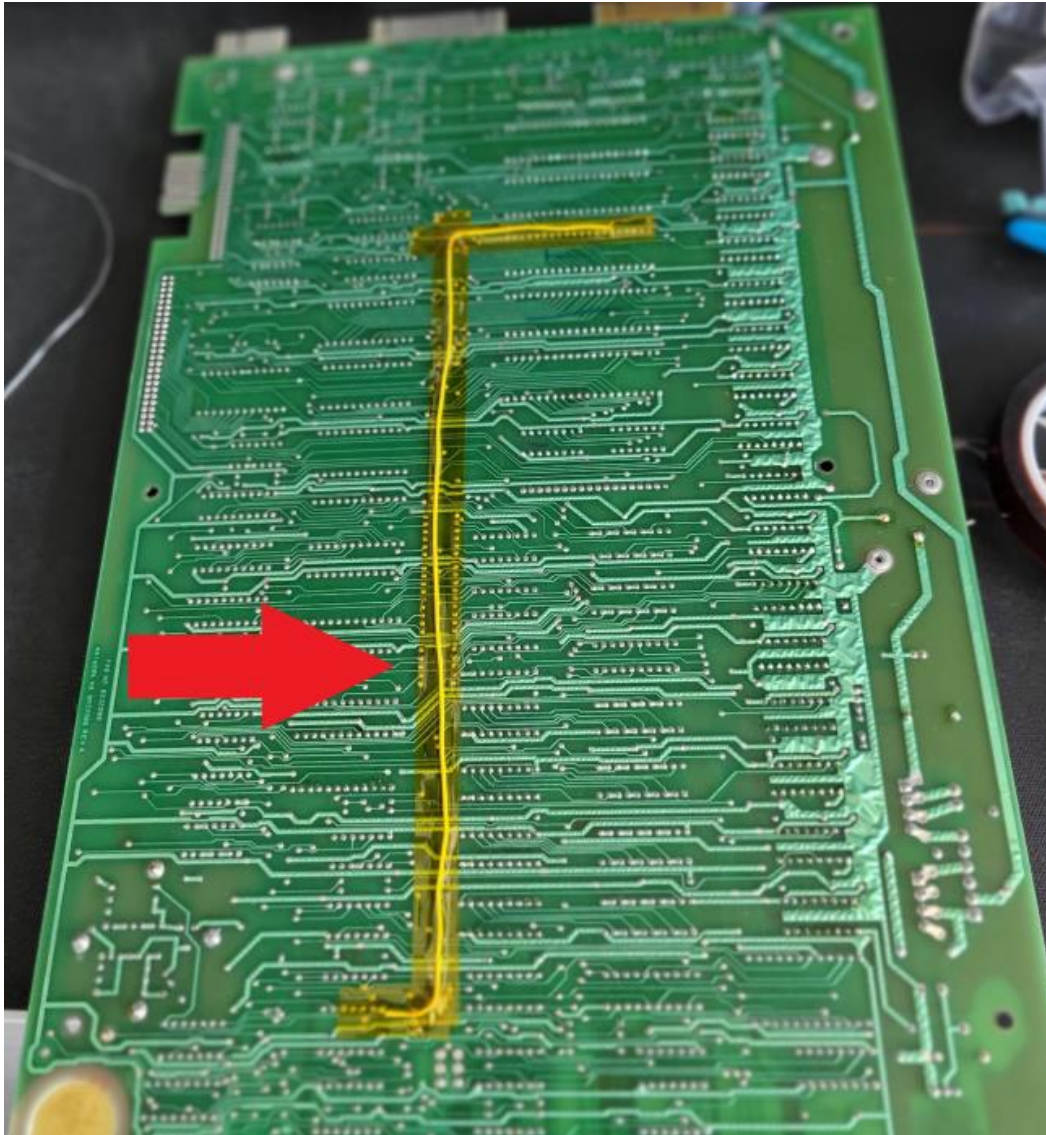


Character ROM modification

The character ROM is the 901340-01 which is different from the original character ROM found on the 8032 motherboards.


SuperPET character ROM, is made of 2 halves. The first have the original 8032-character ROM and the second half of this ROM contains a true ASCII character set and an APL character set. Without this modified character ROM, the SuperPET board will not work.

You can find the ROM image file here:

<https://www.zimmers.net/anonftp/pub/cbm/firmware/computers/pet/SuperPET/index.html>

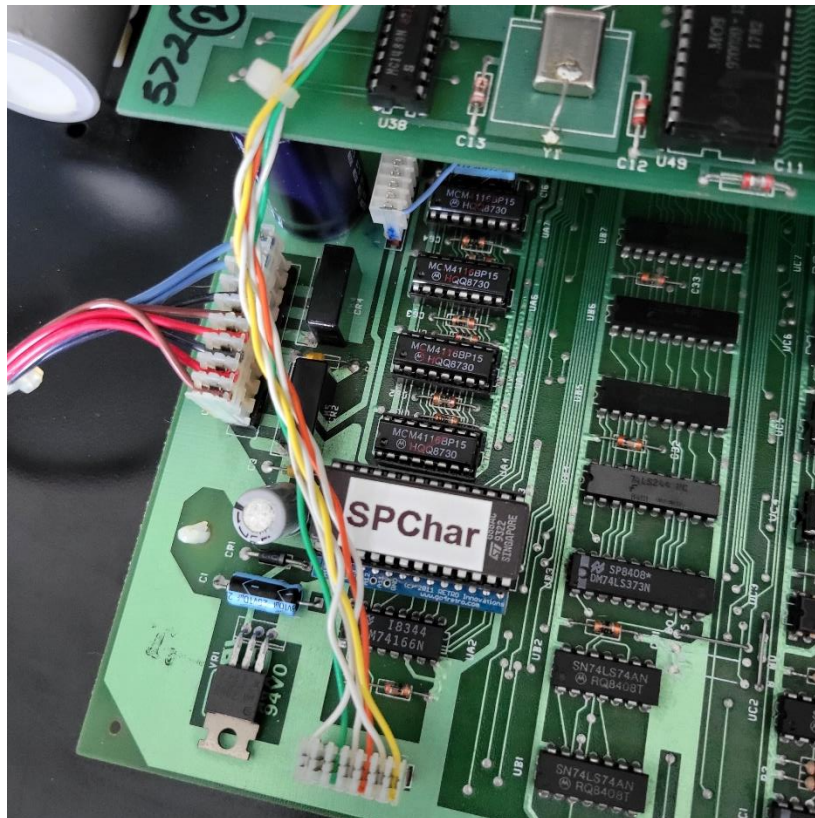

The Super PET board (2 board version)

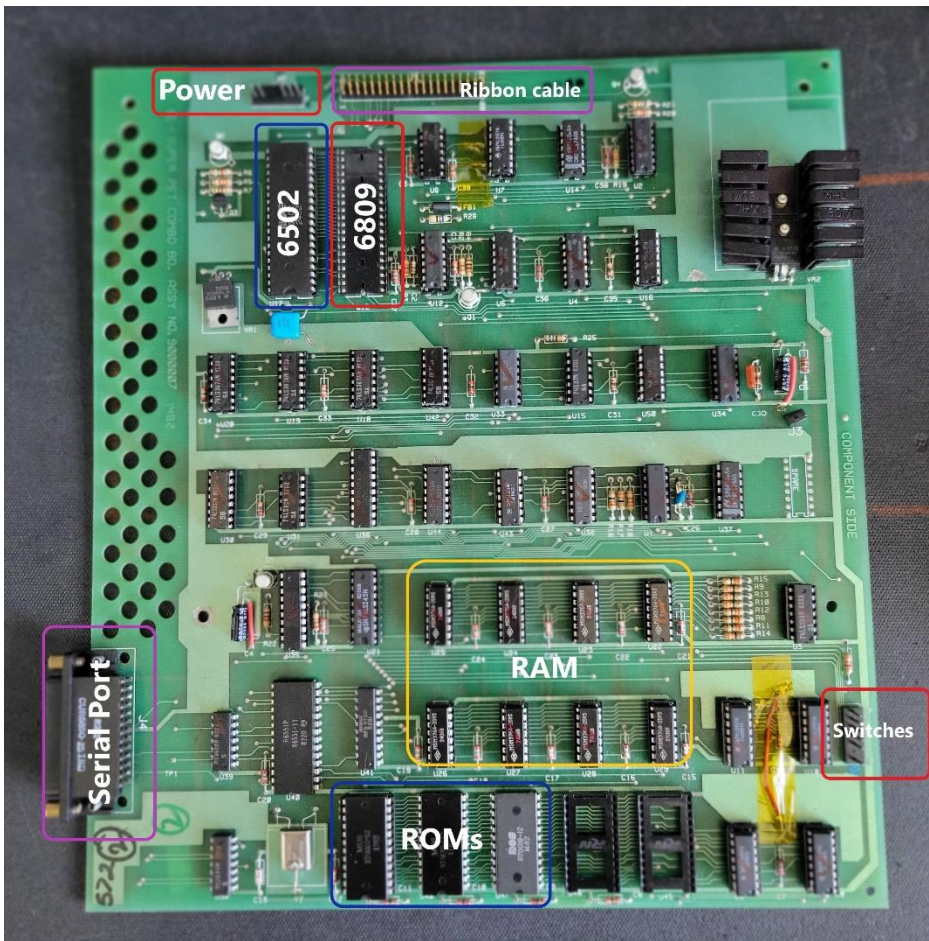

Commodore Super PET Board

6502 CPU: At U17
6809 CPU: At U13

RAM: At U22 - U29 - 3764. The 4164 can be used

970018-12: At U47 "Waterloo A000-BFFF" ROM
970019-12: At U48 System's operating firmware
970020-12: At U49 System's operating firmware

The "Waterloo A000-BFFF" ROM is part of the system's firmware and contains essential software for the operation of the Super PET. If this ROM is missing or faulty, the system may not function correctly.

Power: At J5 - Get power from main 8032 board

Ribbon Cable: At J1 - Replaces CPU (6502) on the main 8032 motherboard

Switches: At J2 - To switch between 6502, 6809, and other modes

Serial Port: At J4 - Standard RS232 connection is used.

NOTE: 8032 motherboard must be completely working \tested or the Super PET board will not work.

<https://www.youtube.com/@RudysRetroIntel>



The Commodore SuperPET is comprised of the following:

- Commodore 8032 motherboard with modifications.
- Daughter board with connects to the 8032 via a ribbon cable and a power cable.

There are 2 versions of the Super PET daughter boards:

- Older version is made up of 3 boards. One for the memory, one is for the CPUs and the large motherboard which is the 8032 board.
- Newer version is made up of 2 boards. One houses the CPUs, memory and additional support logic. The other is the 8032 board.

Before starting, check the following:

- Check to ensure the ribbon cable is connect into the 6502 socket on the 8032 motherboard and to the SuperPET daughter board.
- Check to ensure the power cable is connected from the 8032 motherboard and to the SuperPET daughter board.

SuperPET Parts

Location	Part Number	Description
U22-U29	4164 (8)	64K x 1 dynamic RAM
U17	6502	CPU
U40	6551	ACIA
U41	901889-01	6702 encoder
U13	6809E	CPU
U47	970018-12	2764 EPROM Waterloo A000-BFFF
U48	970019-12	2764 EPROM Waterloo C000-DFFF
U49	970020-12	2764 EPROM Waterloo E000-FFFF

970018-12: At U47 "Waterloo A000-BFFF" ROM


970019-12: At U48 System's operating software or firmware

970020-12: At U49 System's operating software or firmware

- RAM: At U22 - U29 are 3764 RAM ICs, however the 4164 RAM ICs can be used
- The "Waterloo A000-BFFF" ROM is part of the system's firmware and contains essential software for the operation of the Super PET. If this ROM is missing or faulty, the system may not function correctly.
- Power: At J5 - Gets power from main 8032 board
- Ribbon Cable: At J1 - Replaces CPU (6502) on the 8032 motherboards. The 6502 is placed onto the daughter board.
- Switches: At J2 - To switch between 6502,6809, and other modes which are Read, Read\Write and Program.


Switch Setting and Usage

For general purposes, leave the 2nd switch to **R\W** (Read and Write). The usage of these switches will not be covered in this manual. You can find the programming language manuals or SuperPET user manual for details on how\when to use these switches. The only switches used to repair a SuperPET is 1) leaving the memory switch to **R\W** and 2) switching between 6502 (8032 PET) and the 6809 (SuperPET) modes.

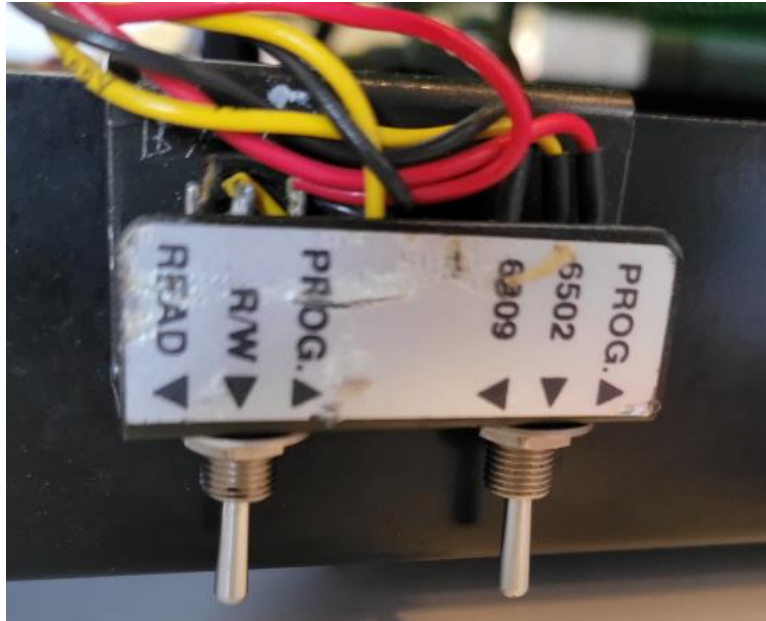

Basic Operation of the SuperPET

The following diagram shows an overview on the SuperPET extensions

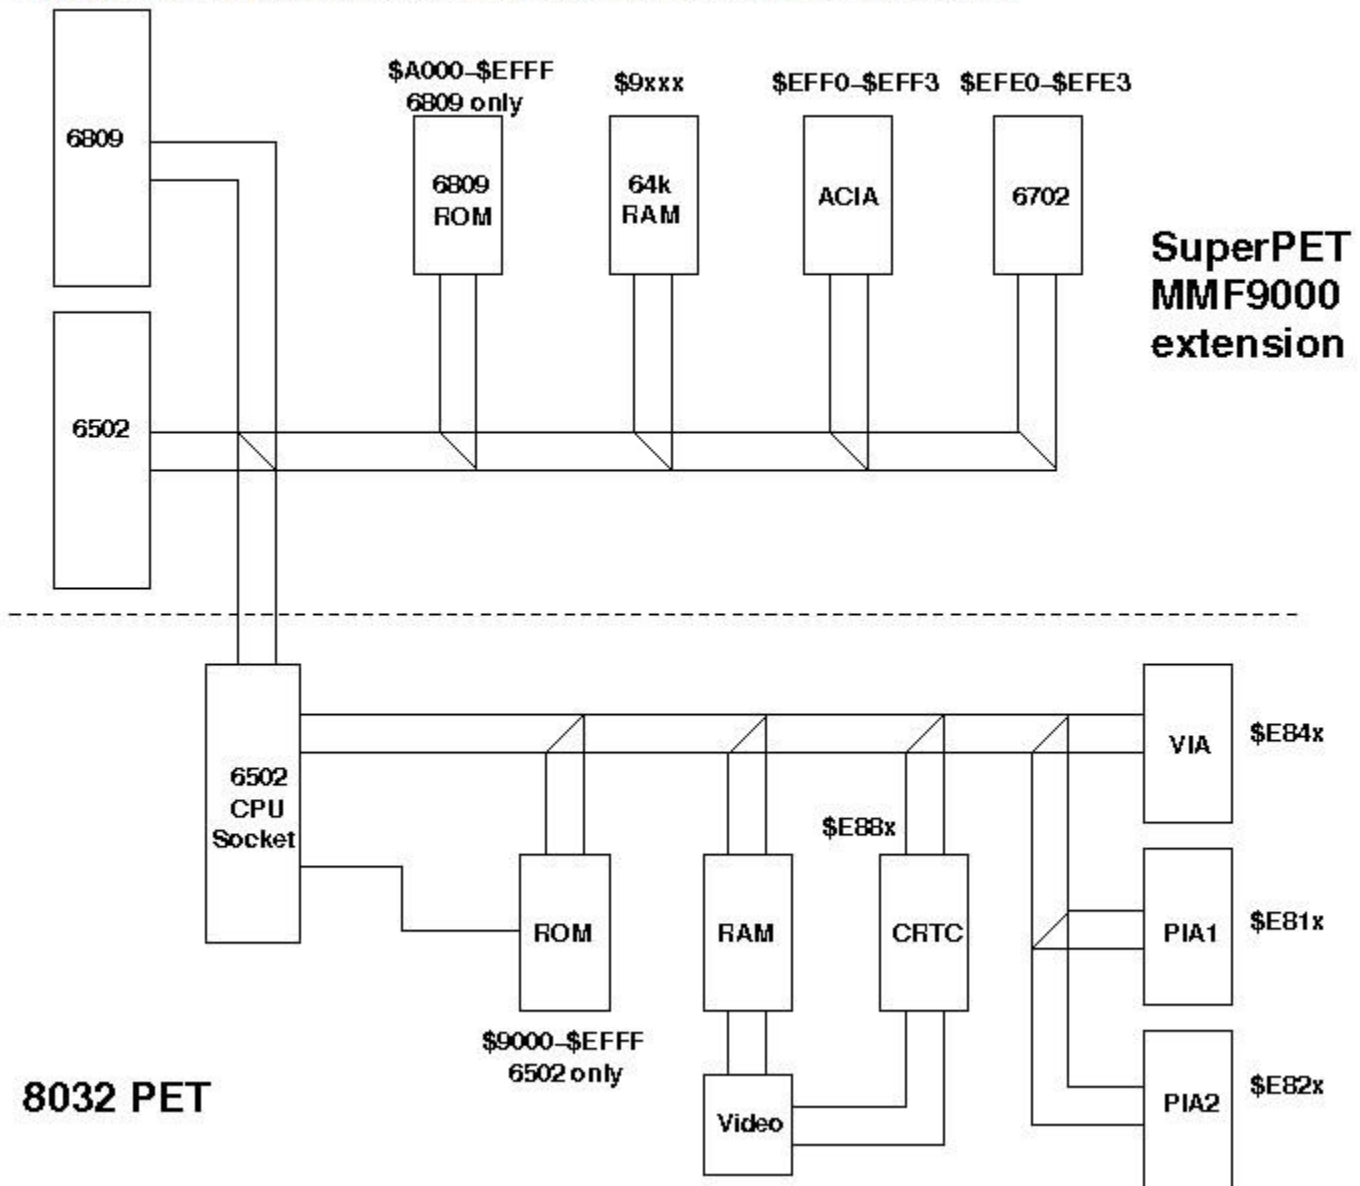

*Original diagram was found randomly on the internet. If you know who created this diagram, please let me know so that I can credit them in this document.


Jumper Wires on SuperPET board

There are 2 jumper wires on the bottom side of the SuperPET board, and 1 on the top side. Ensure they are there and connected properly.

Bottom Side Jumper Wires


Verify\Install a wire from **U21** pin 10 -74LS245 connected to **U25** pin 16 – 4164 RAM.

This jumper wire **is not required on the REV A board **ARTWORK NO. 9000017 REV. A***

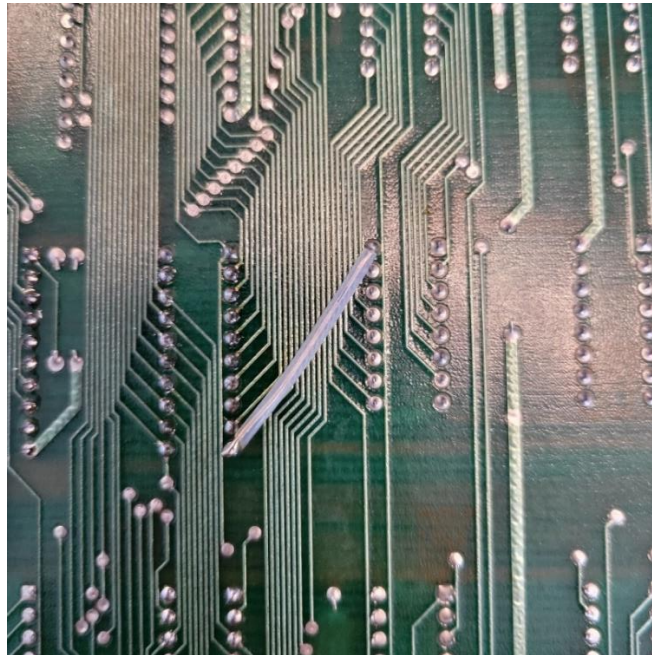


Verify\Install a wire from **U46** – Blank ROM socket Pin 24 to 21.

This jumper wire **is required on the REV A board **ARTWORK NO. 9000017 REV. A***

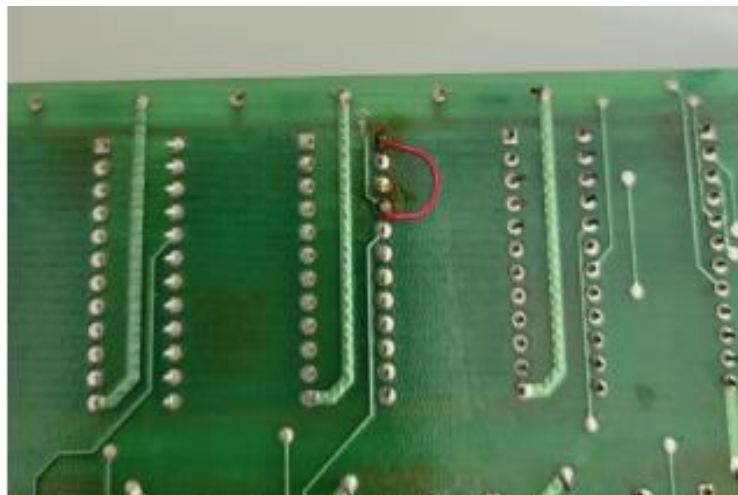

Top Side Jumper Wire

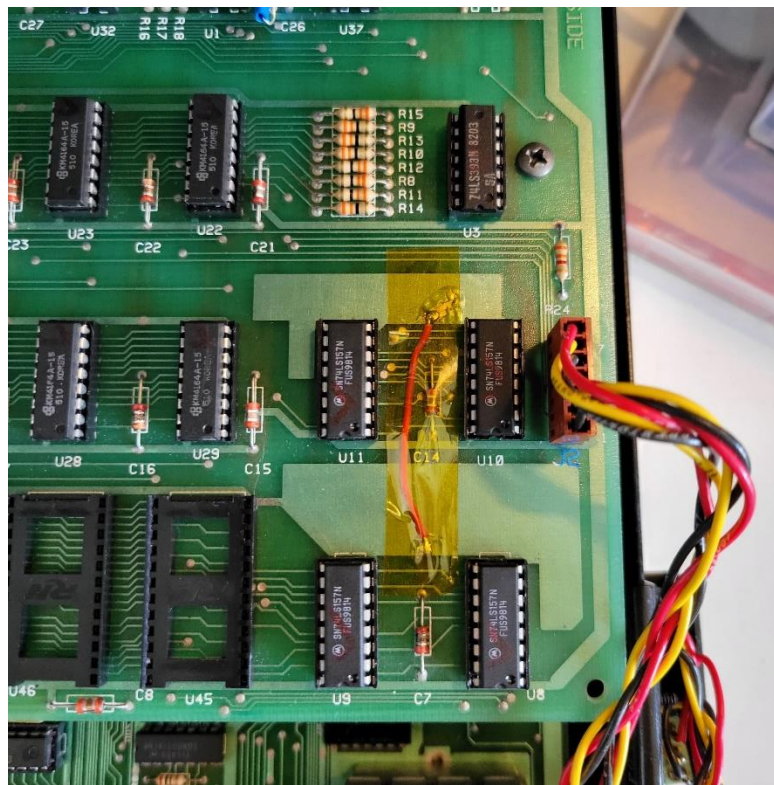


Verify\Install a wire from the 2 locations as per above picture as there are no markings on the daughter board as to where exactly to install this jumper wire.

This jumper wire **is not required on the REV A board ARTWORK NO. 9000017 REV. A*


Additional Jumper Wires Required on ARTWORK NO. 9000017 REV. A

These are the jumper wires required on the REV. A board and not on the REV B. board. Please know which version you are working. See bottom of the SuperPET board for REV versions.


Jumper Wire (short wire) from **U6** Pin 8 connected to CPU ribbon cable connector header Pin6

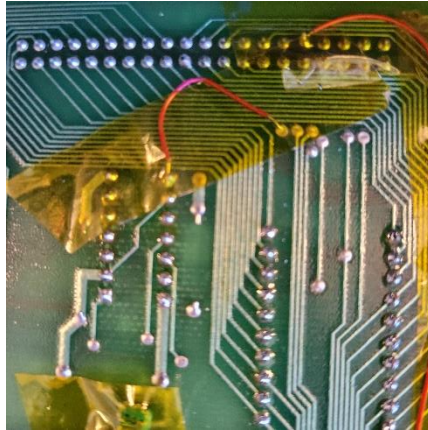

Jumper Wire (longer wire) from **U17** (6502 CPU) Pin 36 connected to Pin36 on the CPU ribbon cable connector

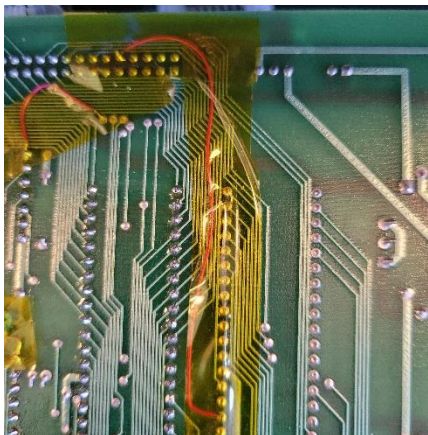

Capacitor (0.1uF) from **U12** Pin 8 connected to **U12** Pin9 (same IC).

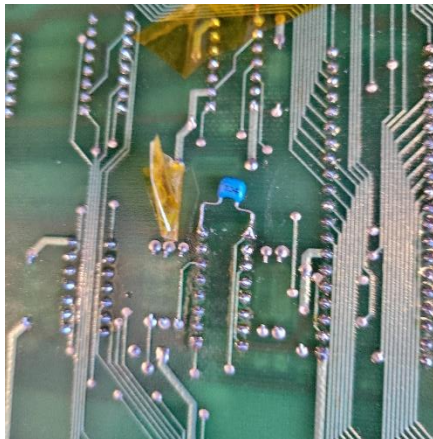

<https://www.zimmers.net/anonftp/pub/cbm/firmware/computers/pet/SuperPET/index.html> or here
<https://github.com/RudyRetrolIntel/Vintage-Computer-Diagnostics>





SuperPET Symptoms and Diagnostics

In the following sections, symptoms are presented and diagnoses. Please note that there could be several faulty\failed ICs.

1. Ensure you remove all ICs in sockets and clean the sockets with an electronic cleaner before starting.
2. Check to ensure the ribbon cable is connect into the 6502 socket on the 8032 motherboard and to the SuperPET daughter board. Verify that the ribbon cable is good. With multimeter, check both ends of the ribbon cable for breaks and\or shorts.
3. Check to ensure the power cable is connected from the 8032 motherboard and to the SuperPET daughter board. Ensure power is coming into the daughter board.
4. Check voltages at voltage regulators at **VR1** and **VR2**.

The steps above are basic troubleshooting and will not be covered in this manual.

Symptoms: With side switches set to either 6502(8032) or 6809(SuperPET) the following errors are show:

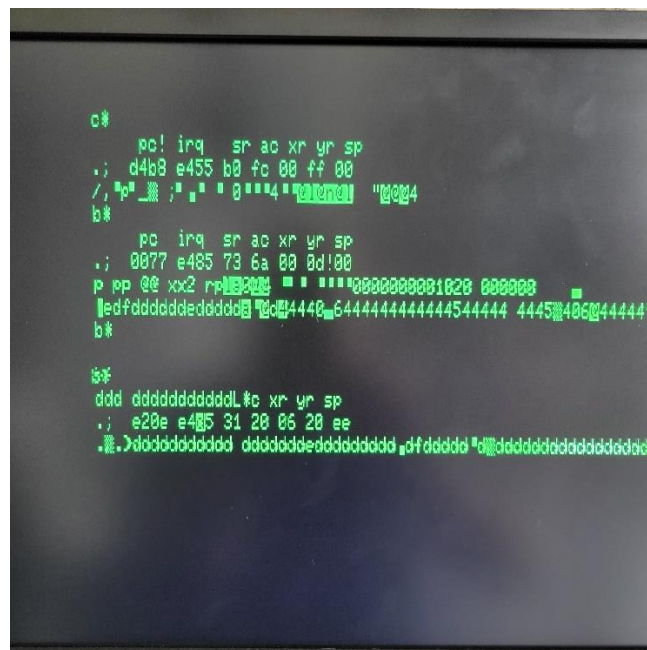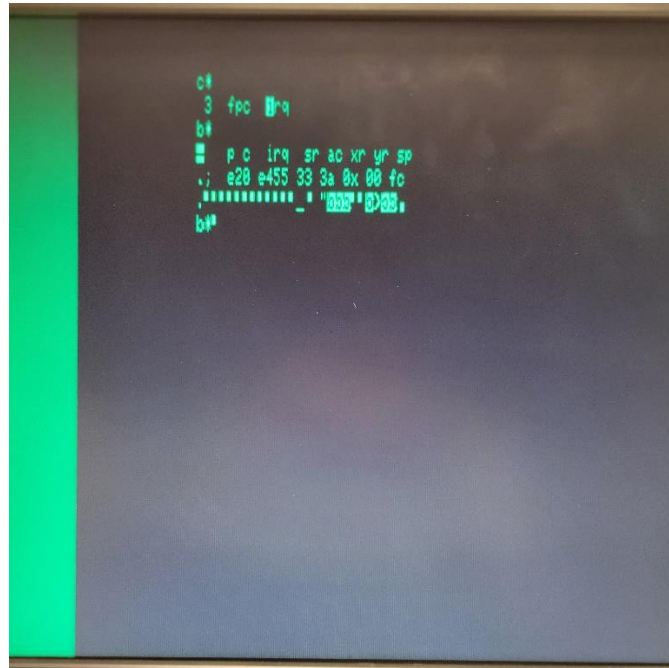

Diagnoses: The jumper wire on the back side of the 8032 is missing, disconnected or not connected to the correct pins. Review and correct.

Check the 6502 CPU at **U17**. Check the 2 set of switches are in working order. Clean or replace as needed. Ensure switches are connected the SuperPET daughter board. Regardless of which daughter board you are using this modification needs to be done.

Symptoms: SuperPET is working with switch to 6502 (8032) mode, however when switching to 6809 (SuperPET) you see the following:



Diagnoses: The character ROM on the 8032 motherboard is missing the second half of the data. Replace the character ROM with the 901340-01. Burn the ROM onto an EPROM and with an adapter you can replace the ROM.

If the character ROM is correct, then issue is with the ROM itself. Burn a new EPROM and replace. Regardless of which daughter board you are using this modification needs to be done.

See **Character ROM modification** section in this manual for more information. This is located on *page 5*.

Symptoms: 6502 works but when switching to 6809 you get the same screen or garbage. Keyboard not responding.

```
*** commodore basic 4.0 ***  
  
31743 bytes free  
  
ready.  
█
```

```
*** commodore basic 4.0 ***  
  
31743 bytes free  
@a  
  
ready.  
█
```

Diagnoses: Check\replace **U47**, **U48** and\or **U49**. Check each ROM and replace. If ROM(s) are good, check their support logic ICs:

U5 – 74LS11


U44 – 74LS139

U43 – 74LS10

U33 – 74LS32

Also check\replace 6809 CPU in **U13**

Symptoms: When running the SuperPET memory test software, you see “X” s on the screen.

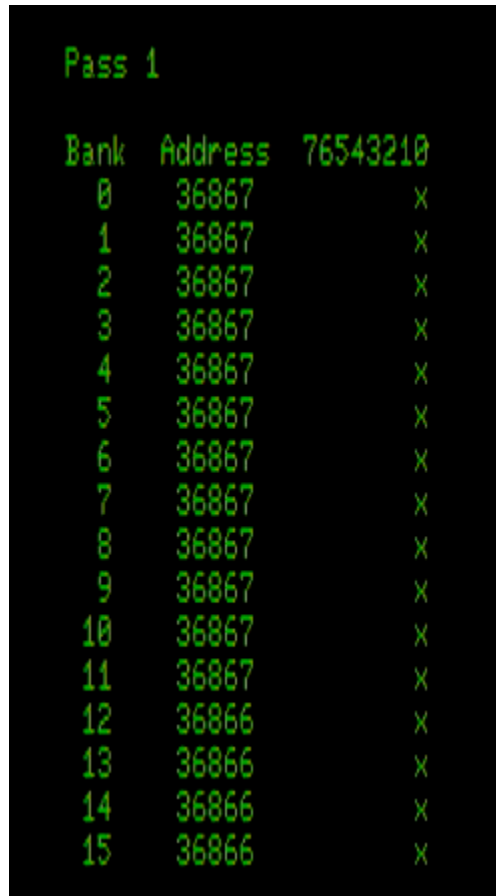

The screenshot shows the output of the SuperPET memory test software. It displays 'Pass 1' at the top. Below is a table with three columns: 'Bank', 'Address', and a column of 'X' marks. The 'Bank' column ranges from 0 to 15. The 'Address' column shows values 36867 for banks 0-11 and 36866 for banks 12-15. The third column has an 'X' for every bank. Above the 'X' marks, the number '76543210' is displayed, which corresponds to the bank numbers 0-9.

Bank	Address	76543210
0	36867	X
1	36867	X
2	36867	X
3	36867	X
4	36867	X
5	36867	X
6	36867	X
7	36867	X
8	36867	X
9	36867	X
10	36867	X
11	36867	X
12	36866	X
13	36866	X
14	36866	X
15	36866	X

Diagnoses: There is a memory test software that can test all the RAM in the SuperPET daughter board called “spetmemtest.prg”.

In the above screenshot, the “X” indicates memory issue at **U22** which is shown in column “0”

The column with “76543210” indicates the location of the bad RAM IC. Here is the list for all the other RAM failures:

An X in column 0 = Bad RAM in **U22**

An X in column 1 = Bad RAM in **U25**

An X in column 2 = Bad RAM in **U24**

An X in column 3 = Bad RAM in **U25**

An X in column 4 = Bad RAM in **U26**

An X in column 5 = Bad RAM in **U27**

An X in column 6 = Bad RAM in **U28**

An X in column 7 = Bad RAM in **U29**

Multiple "X" s means there are several bad RAM ICs. Replace bad RAM with 4164 as they can be used. Ensure that the replacement RAM ICs are the same speed or faster.

When running the SuperPET memory test and all RAM ICs are good, you should see no "X" s.

```
Pass 1
Bank Address 76543210
0
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
```


Symptoms: Memory related issues. Memory not working properly, memory has strange behavior, however RAM ICs test good on external RAM tester.

Diagnoses: Check support logic ICs:


- **U3** – 74LS393
- **U4** – 74LS393
- **U7** - 74157
- **U8** – 74LS157
- **U9** – 74LS157
- **U10** – 74LS157
- **U11** – 74LS157
- **U14** – 74LS 74
- **U15** – 74S37
- **U16** – 74S08
- **U21** – 74LS245
- **U41** – 6702

****NOTE:** The 6702 at **U41** is a very RARE IC!! There are no replacements for it and Commodore has never release the logic that is within the MPS 6702 IC.

The 6702 is required for the original versions of the SuperPET software but the programs have been cracked so they don't require the 6702. You can find them here: <http://mikenaberezny.com/hardware/superpet/waterloo-languages/>

Symptoms: No programming language loads. 6502 and 6809 appears to be working and language file is on the diskette (or SD card). System tries to load the program but is never successful. 6809 mode appears suck and 6502 mode is working.

Here is an example trying to load FORTRAN language.

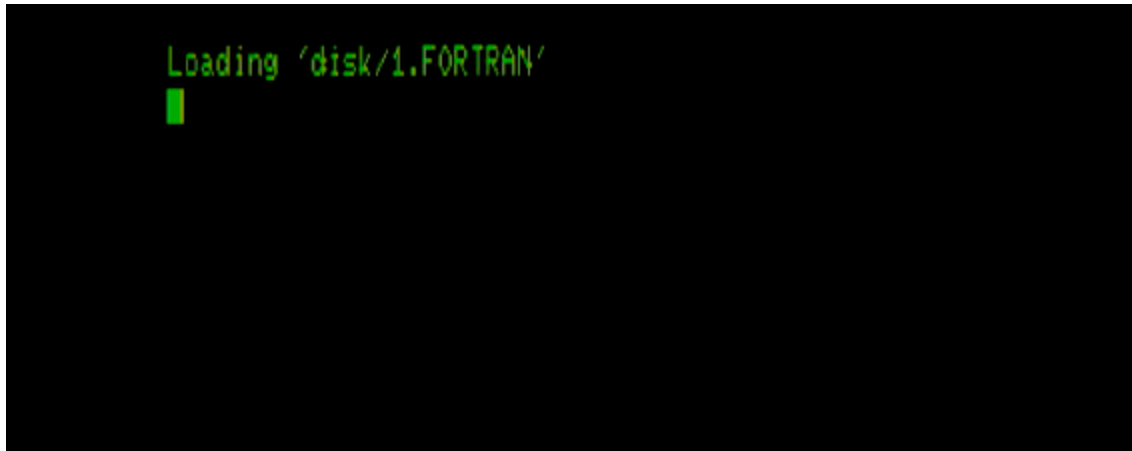


Diagnoses: Check\replace **U41** – 6702. This IC is required to load any development language. When testing, the language software does take a while to load.

****NOTE:** The 6702 at U41 is a very RARE IC!! There are no replacements for it and Commodore has never release the logic that is within the MPS 6702 IC.


The 6702 is required for the original versions of the SuperPET software but the programs have been cracked so they don't require the 6702. You can find them here: <http://mikenaberezny.com/hardware/superpet/waterloo-languages/>

Symptoms: Turning on the SuperPET with switch in 6502 or 6809 position, you see garbage on the screen, like the following:

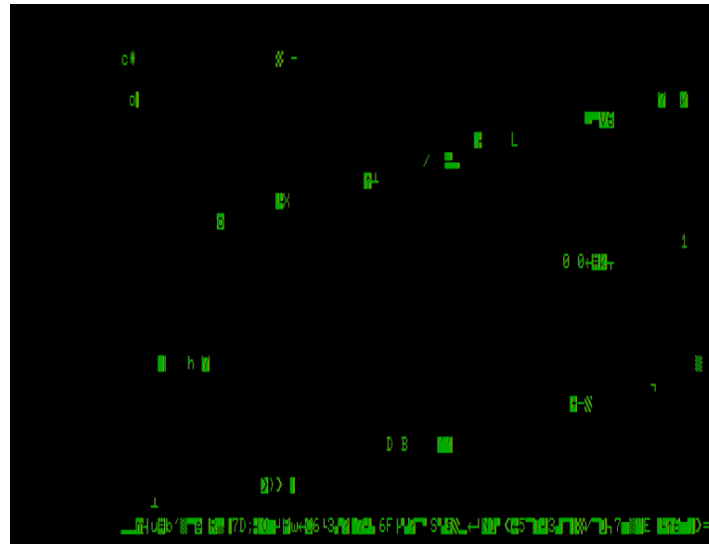


Diagnoses: Check\replace **U6** – 74LS164 and\or check\replace **U40** – 6551-11

Symptoms: System will not boot up into 6502, no video however when switching to 6809 mode you see the following:

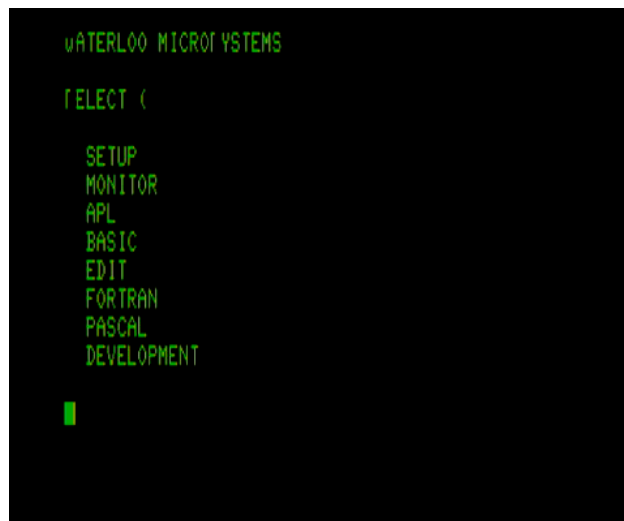


Diagnoses: Check\replace **U2** – 74LS04 and\or **U5** – 74LS11

Symptoms: SuperPET boots up but hangs and no keyboard input. Both 6809 and 6502 show the following screen.

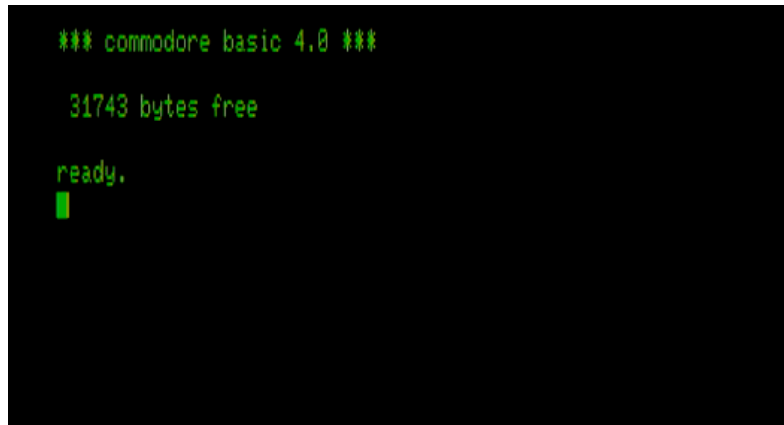

Diagnoses: Check\replace **U12** – 74LS123, **U20** – 74LS367, **U18** – 74LS367 and\or check\replace **U40** – 6551-11

Symptoms: SuperPET show a green dot in the middle of the screen. No chirps and no power up.



Diagnoses: Turn off the SuperPET immediately!! This can cause damage to the monitor.

Check\replace

- **U19** – 74LS367
- **U42** – 74LS138
- **U34** – 74LS32

Recommend to replace all 3 of the above ICs with new ones due to their importance and how they may damage the monitor. These are common ICs and very inexpensive.

Symptoms: SuperPET continuously reboots and chirp is heard over and over again in 6502 mode. When booting directly to 6809 mode, you get a screen full of characters. Or 6502 boot fine and when you switch to 6809 and back to 6502, you see the following:

```
*** commodore basic 4.0 ***  
  
31743 bytes free  
  
ready.  
  
?syntax error in 255  
ready.
```

Diagnoses: Check\replace **U1** – 74LS04

Symptoms: SuperPET only shows a complete green screen on boot up. This is true for 6502 or 6809 modes.



Diagnoses: Check\replace **U19** – 74LS367

Rudy's Retro Intelligence



Commodore Super PET - SP9000 Diagnostics Manual